



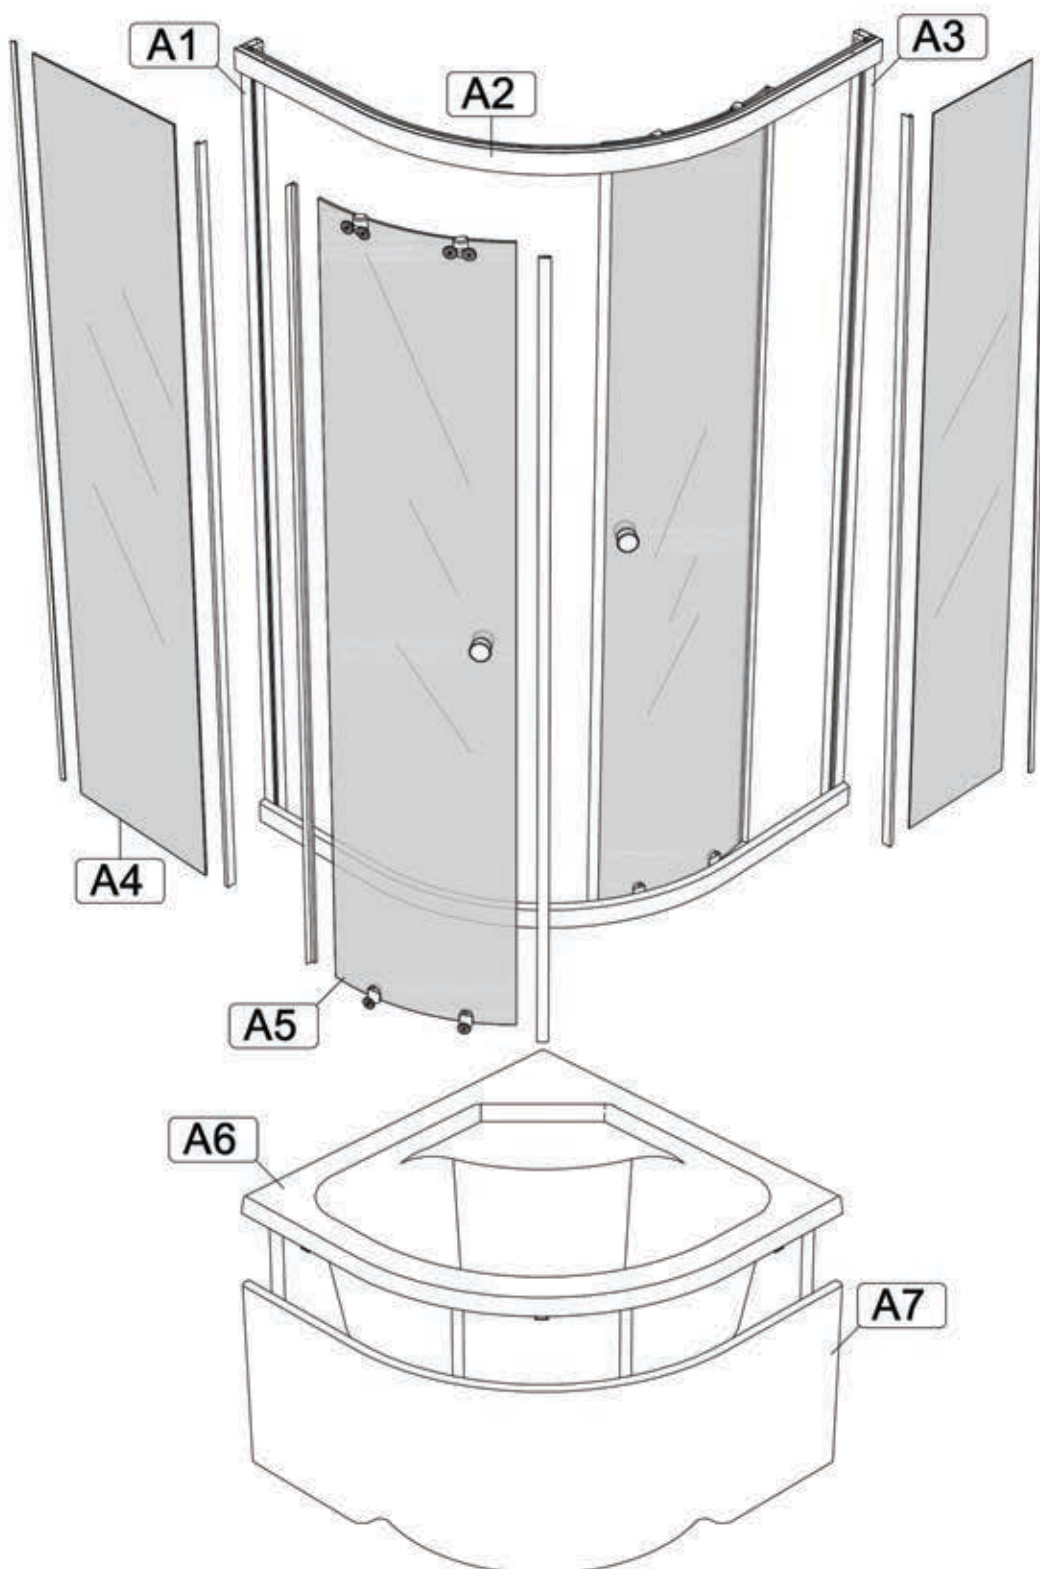

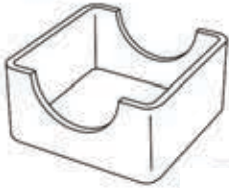




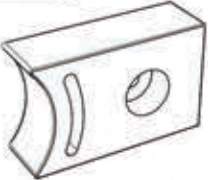









Инструкция по сборке душевой кабины



ВИРГО





		B1 	B2 	B3 
B4 	B5 3.5x50 	B6 3.5x19 	B7 	B8 3.5x12 
B9 6x50 	B10 	B11 	B12 	B13 
B14 	B15 	B16 	B17 	B18 




		B19		B20	
B21	B22	B23	B24 3.5x19	B25 3.5x15	
B26 M3.5	B27	B28	B29	B30	

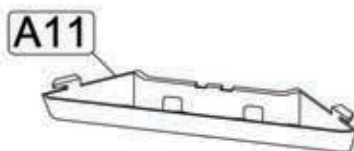
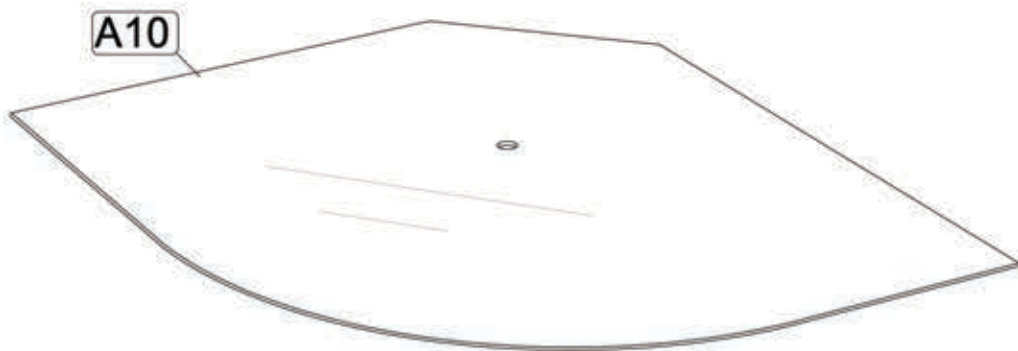


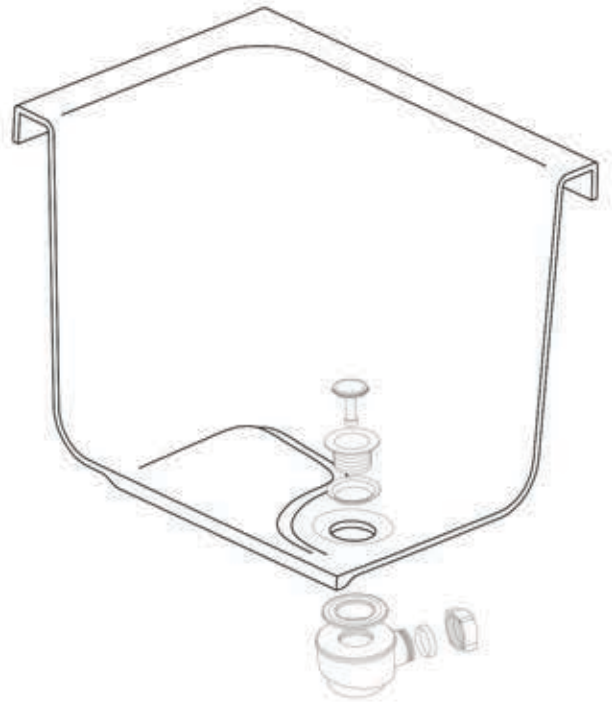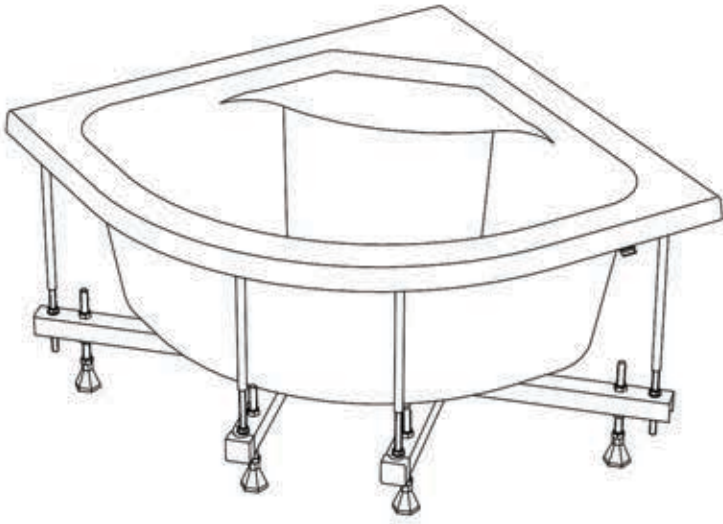


A6 A2


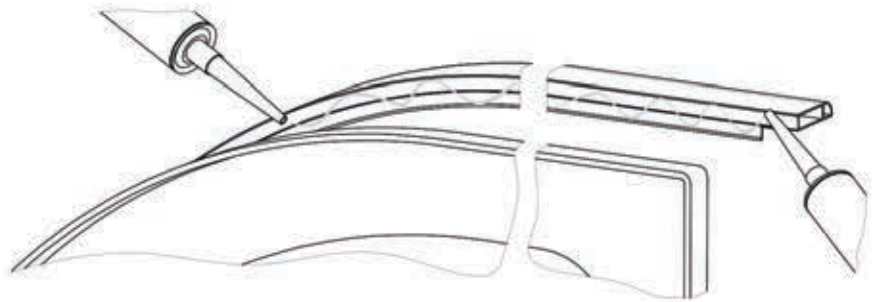


B4
B6

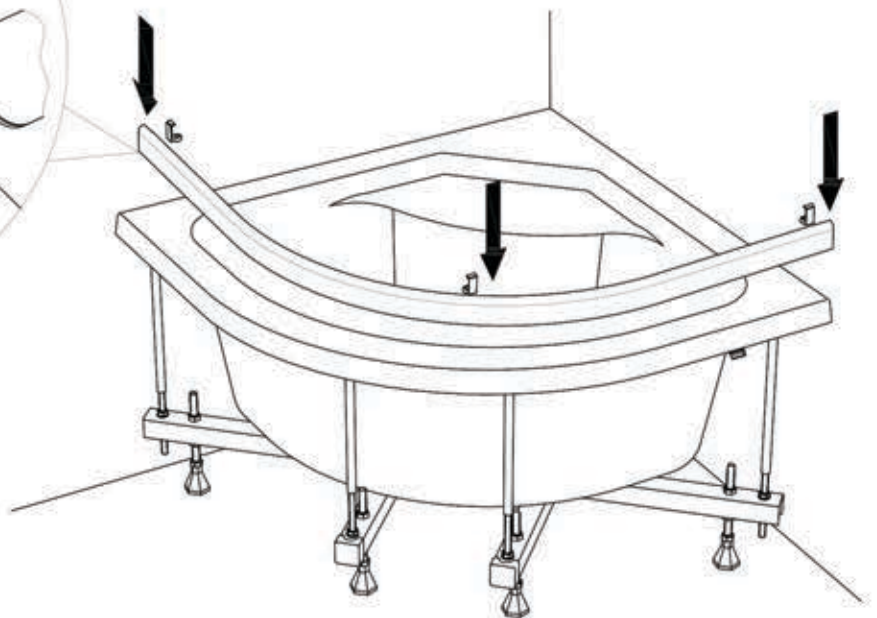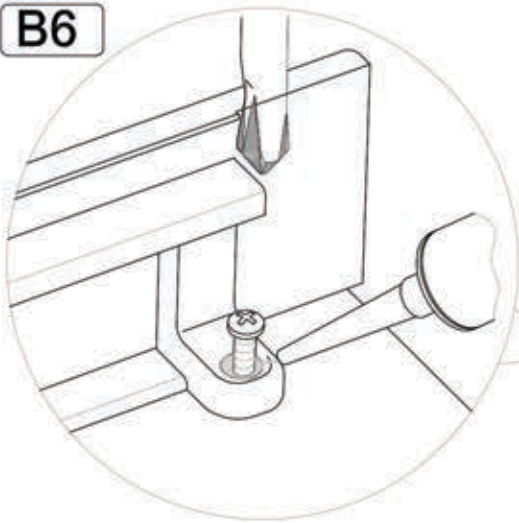


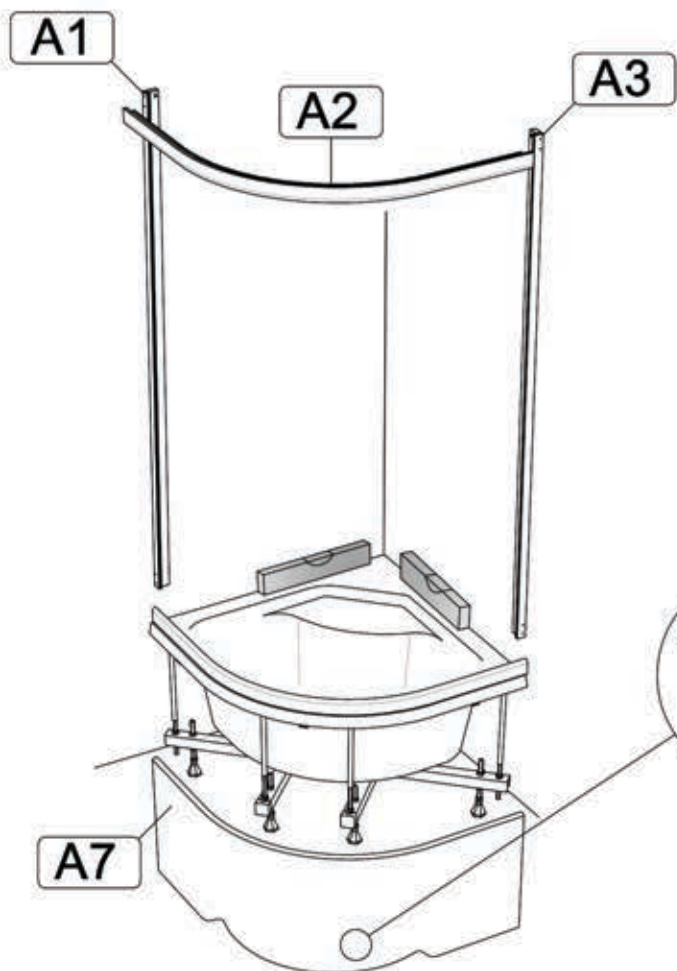


- A7
- B1
- B2
- B3
- B7

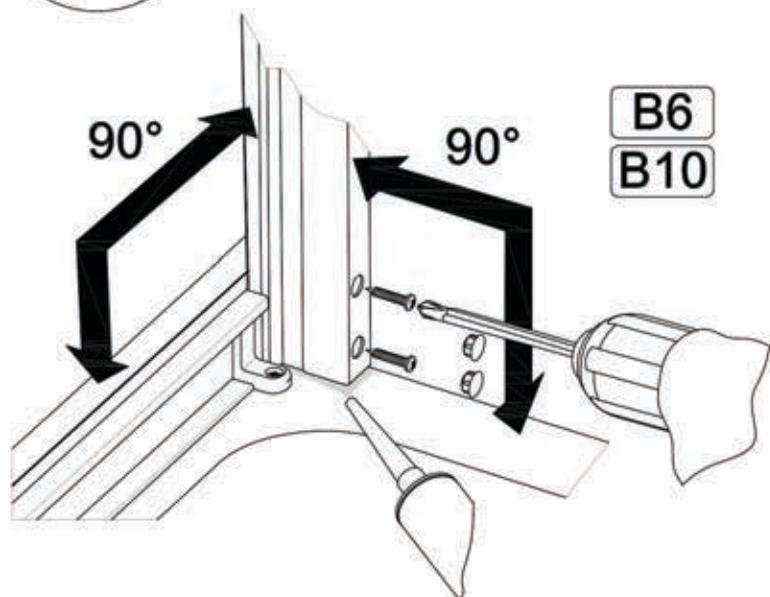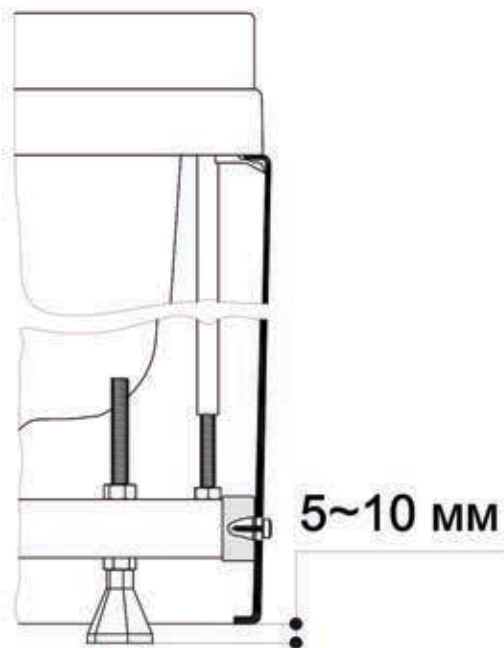


- B5
- B9
- B10




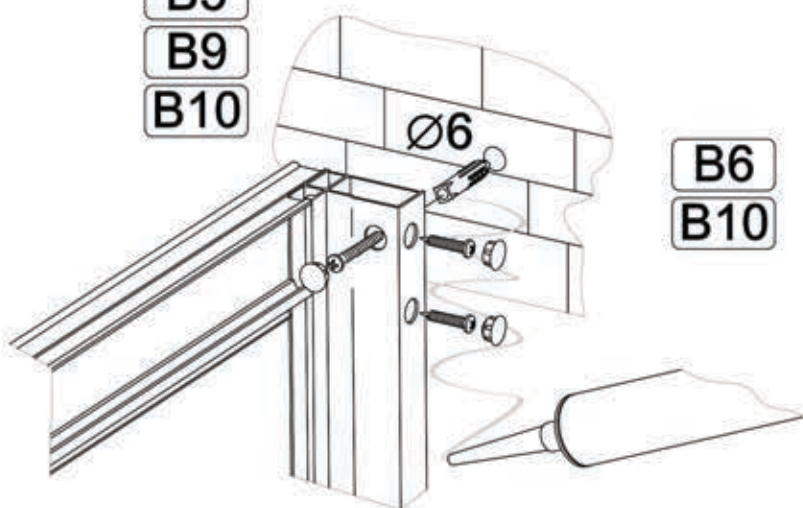


- B8
- B11

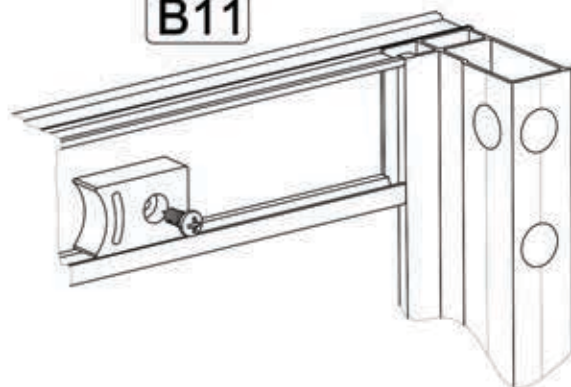





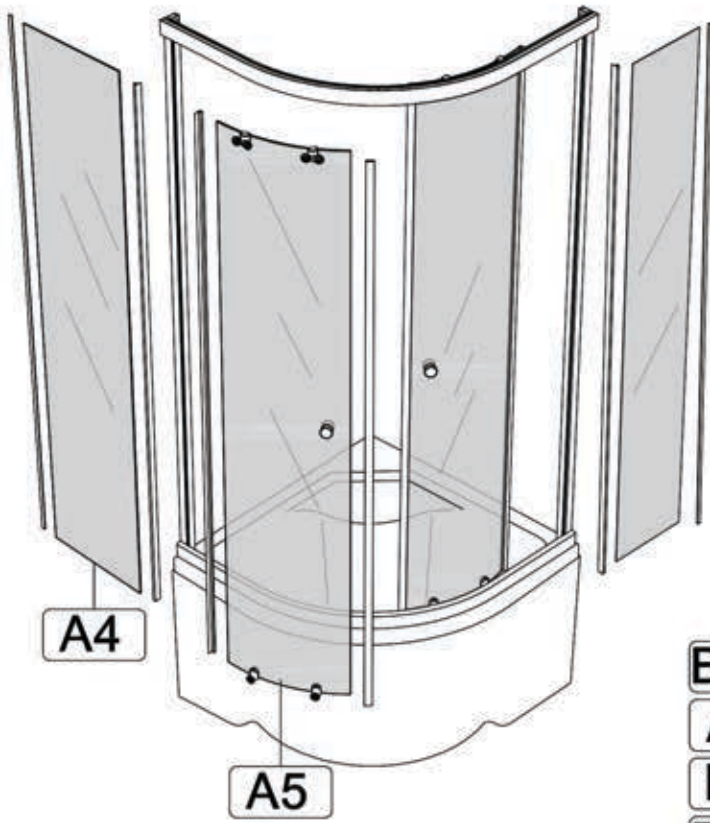




B16 ✂
 A4
 B8
 B12

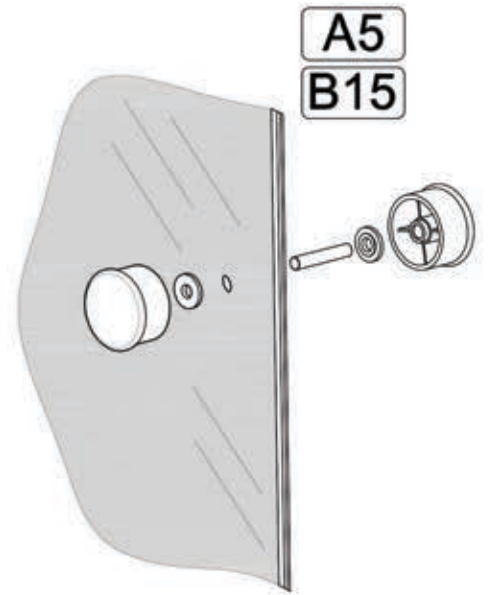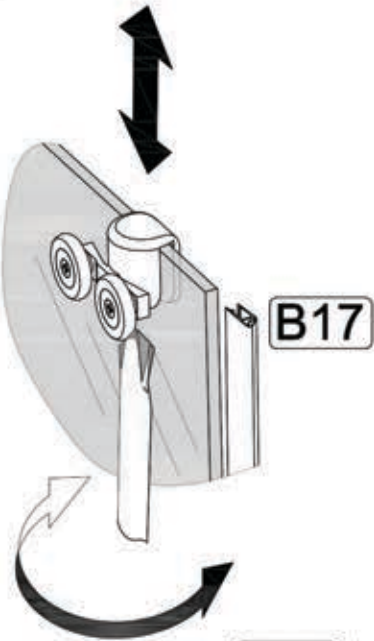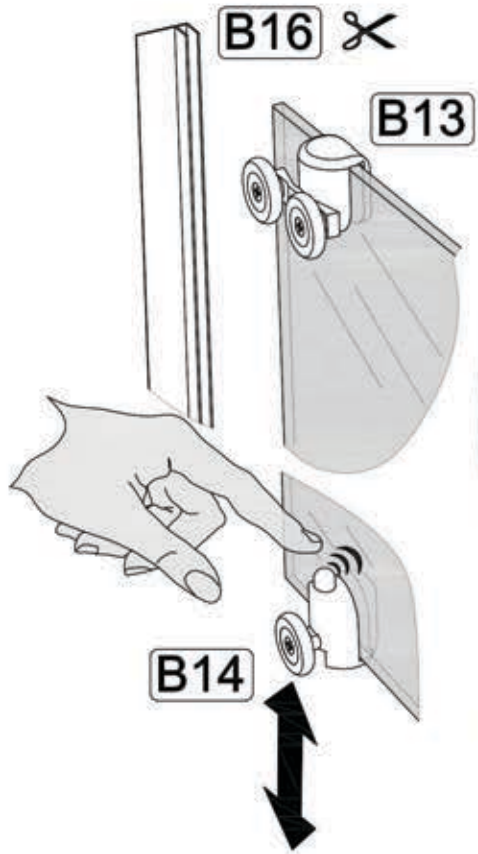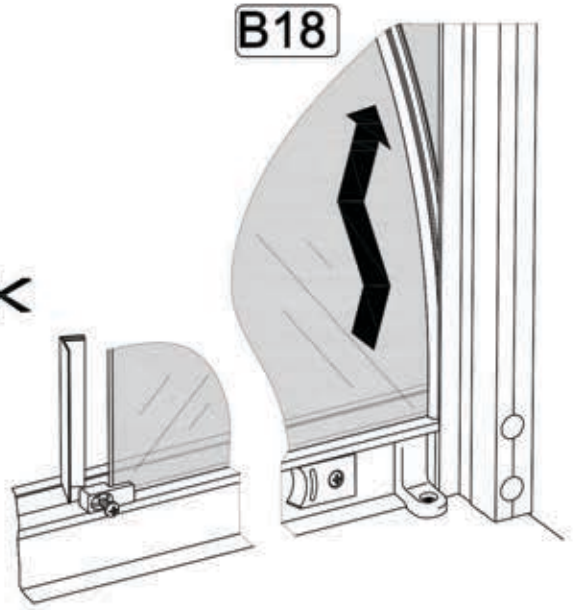

B8 = = B8
 B11 B11

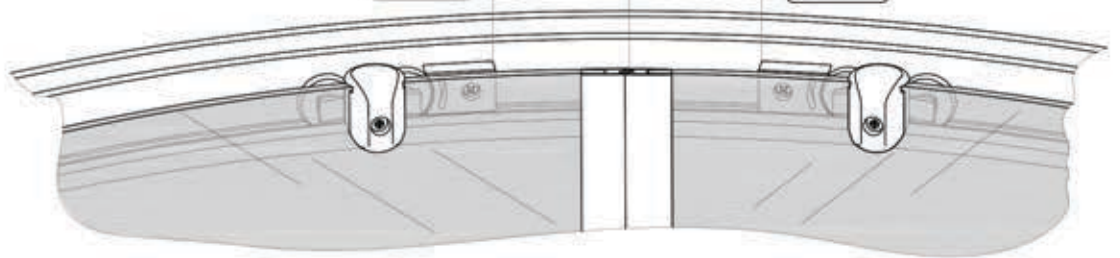

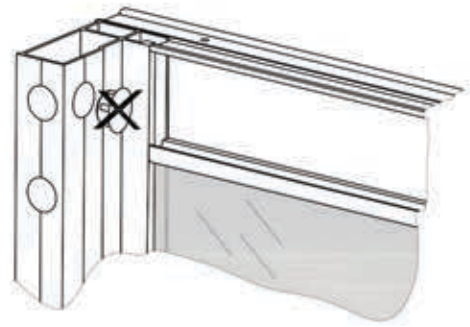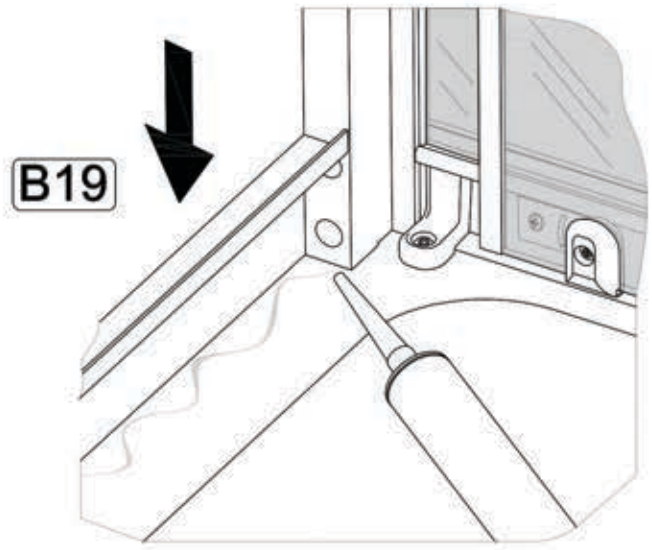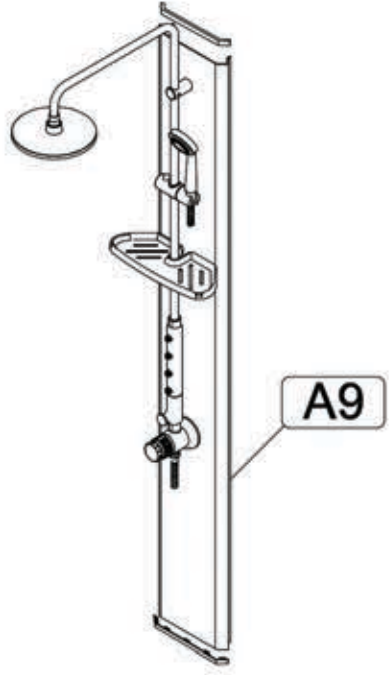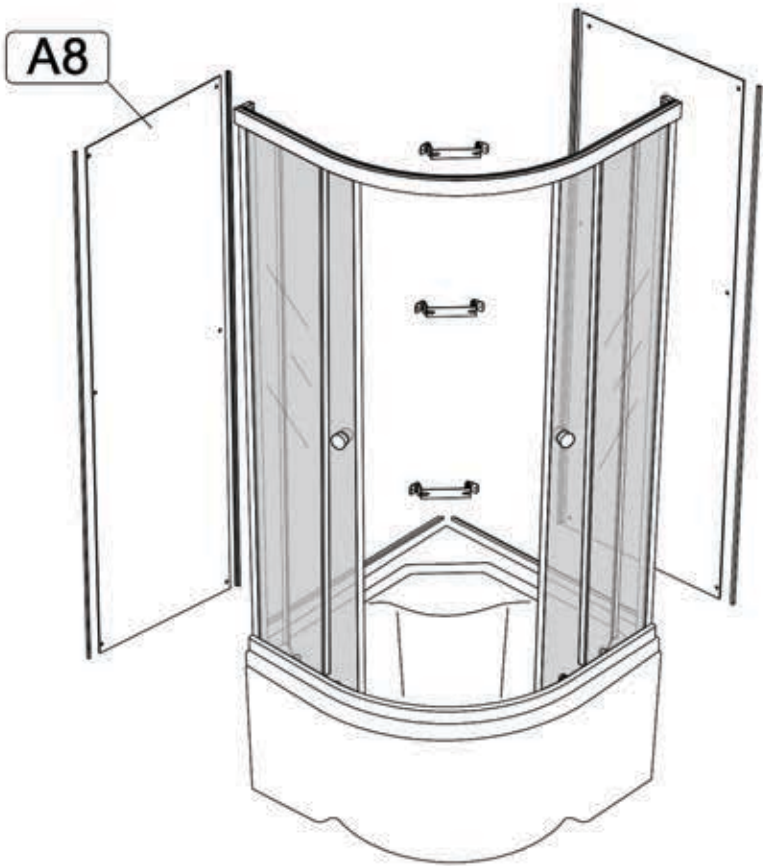


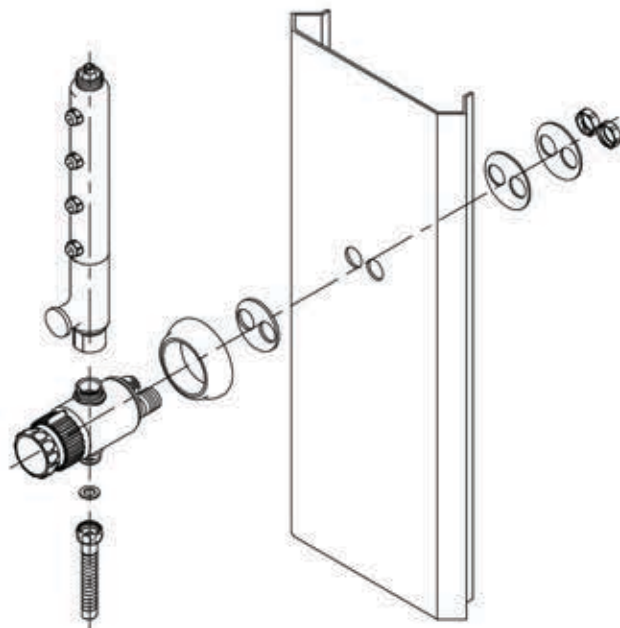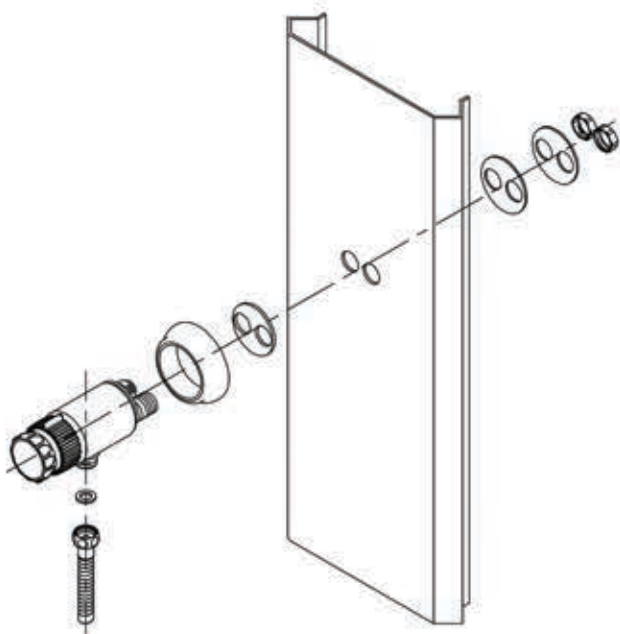


ЭКО
B3005

СТАНДАРТ
B2005


ЛЮКС
B2005M

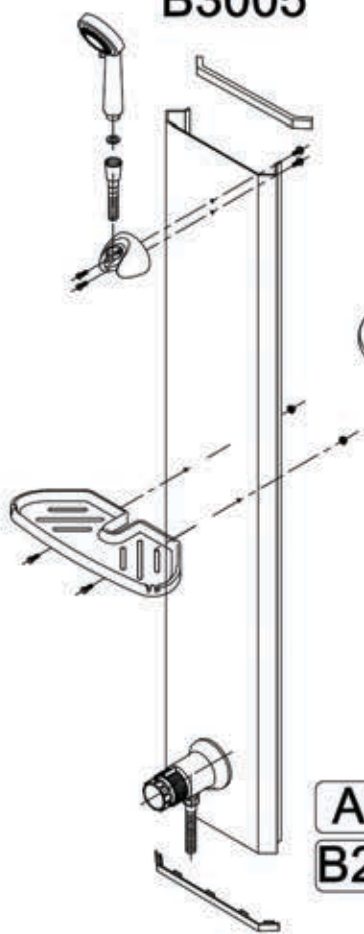

A9
B20

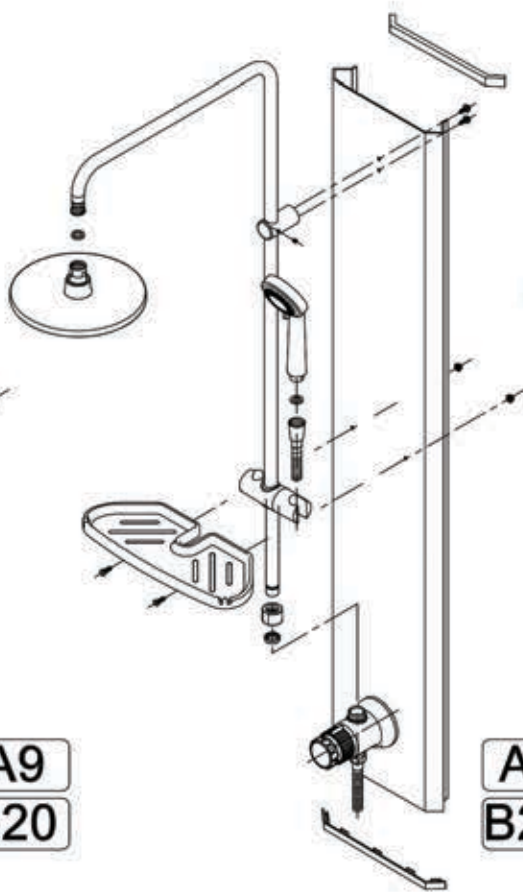


A9
B20

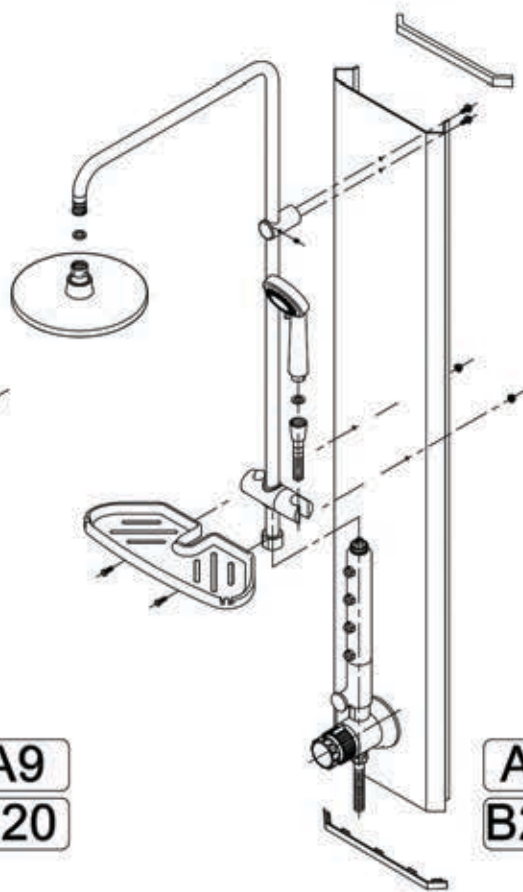


A9
B20

A8

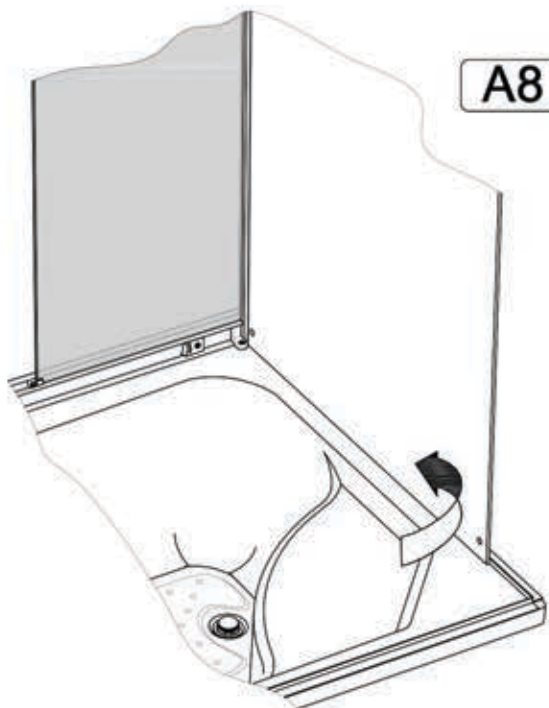

B30 ✂

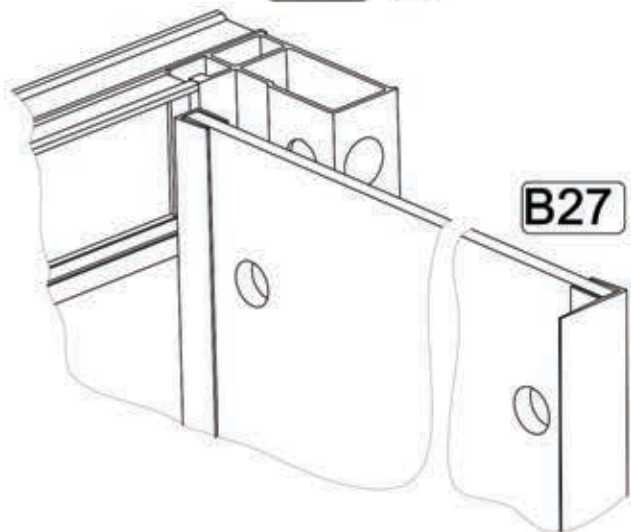


B27 ✂

B21


B22

B24

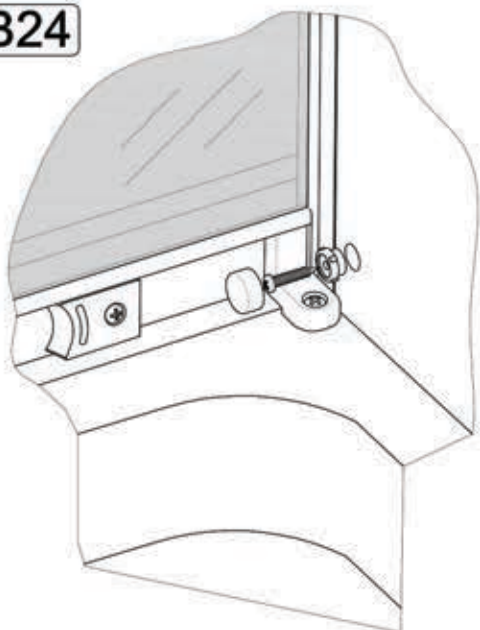


B22 B26





B25 B28




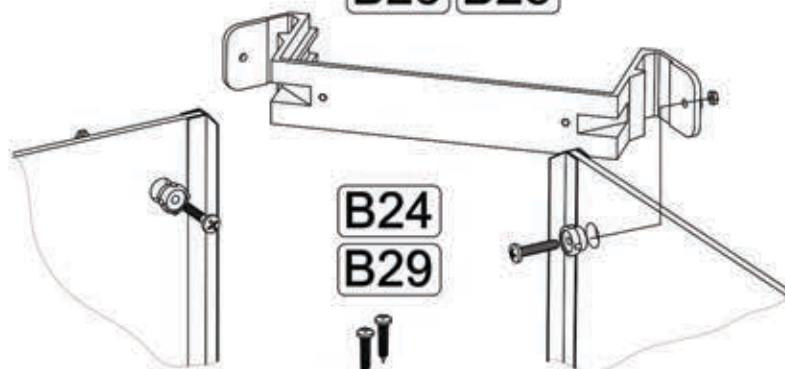


B24

B29

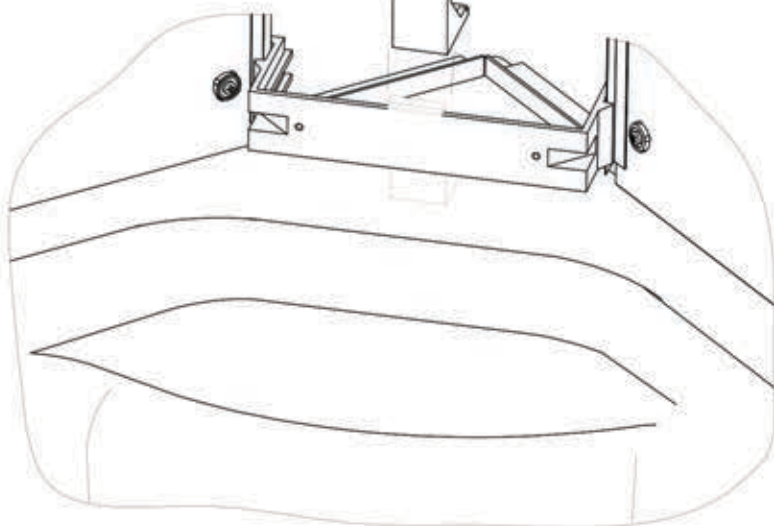

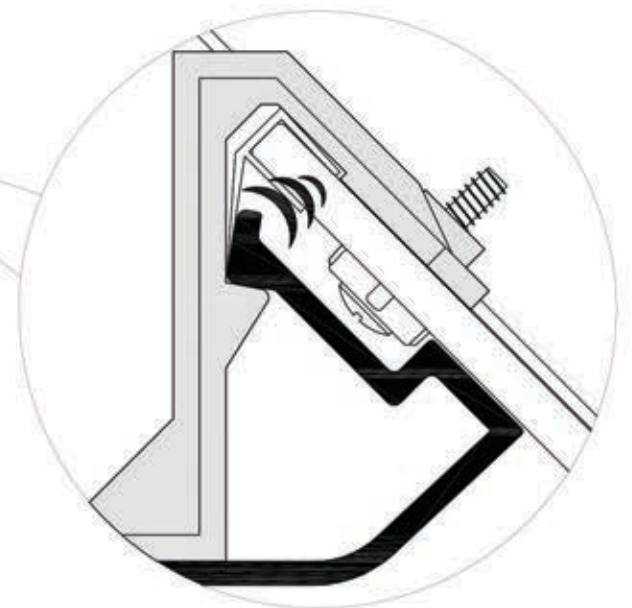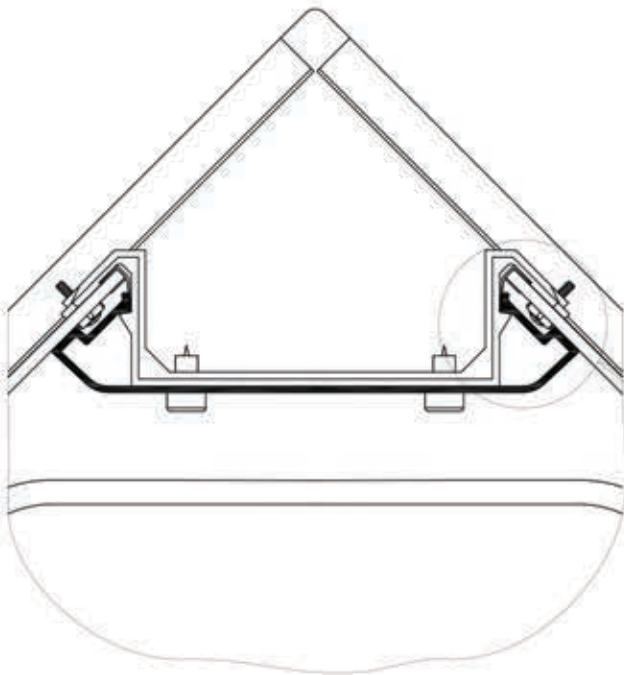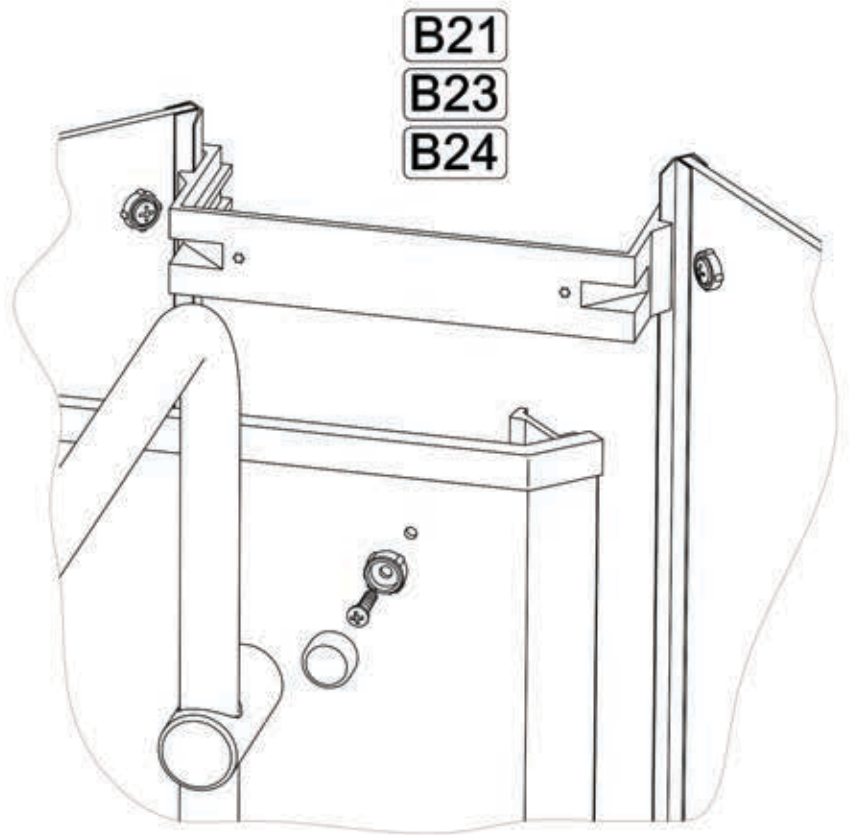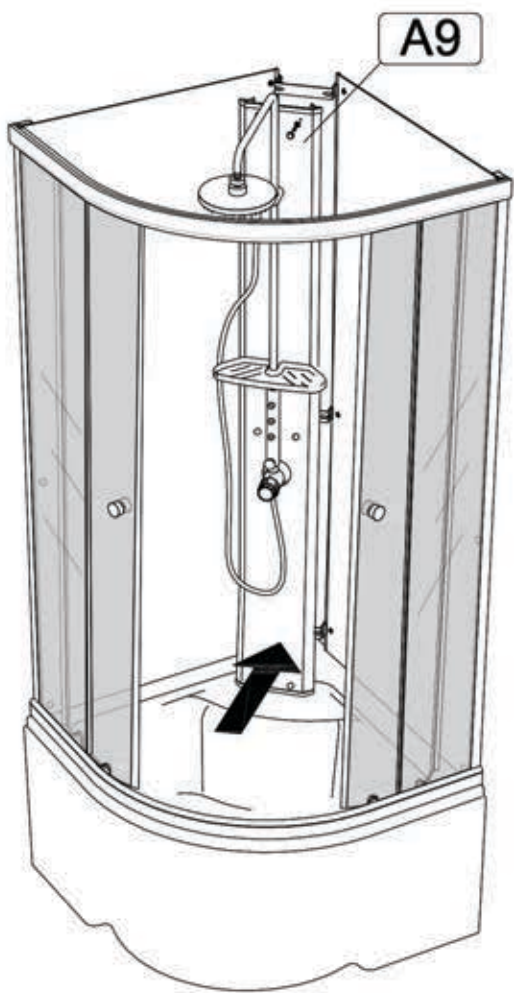

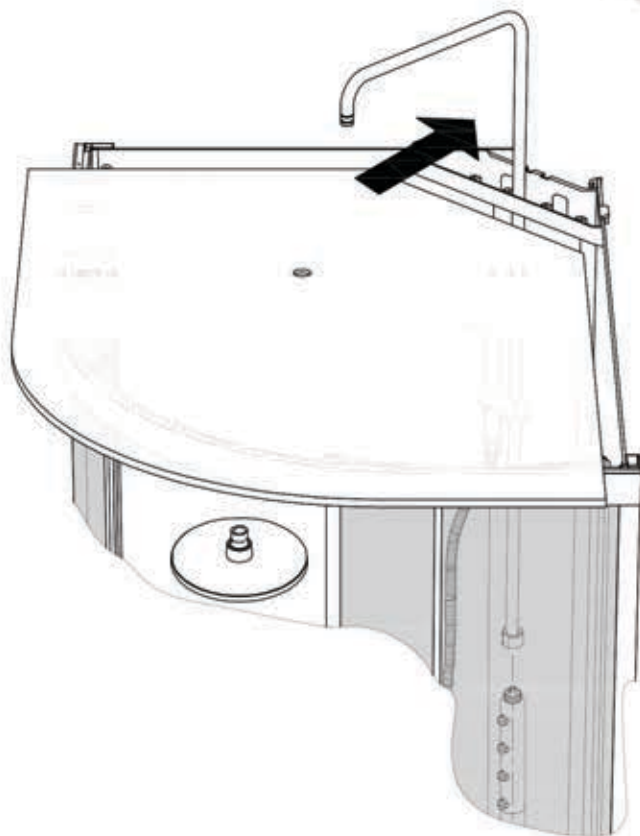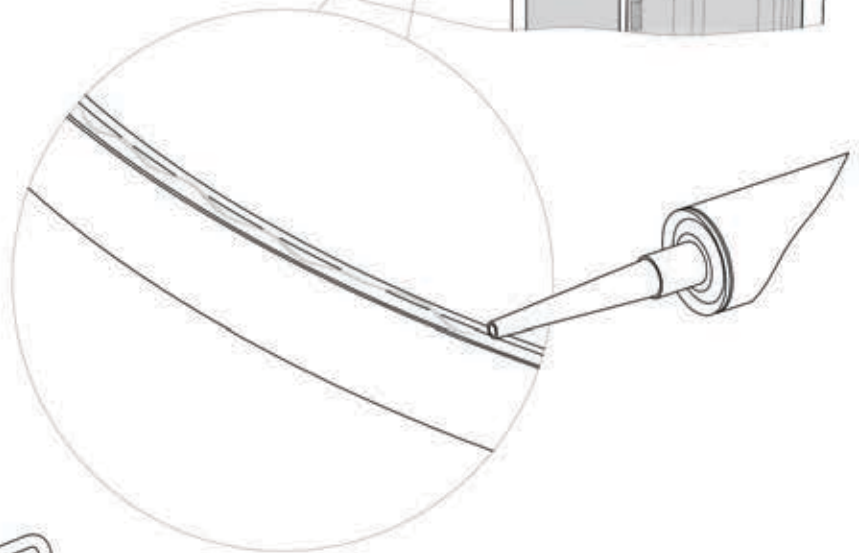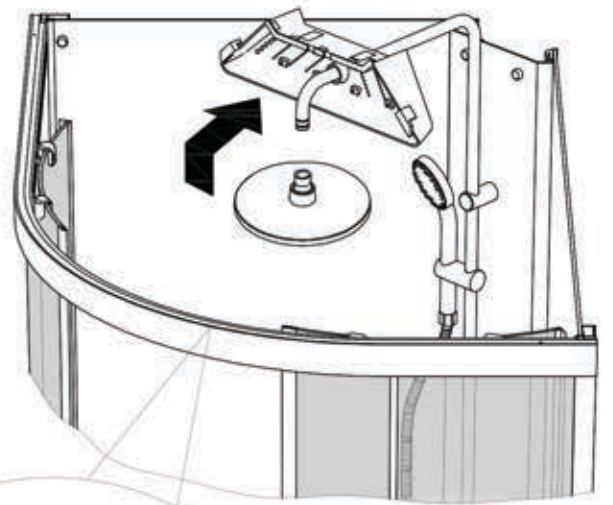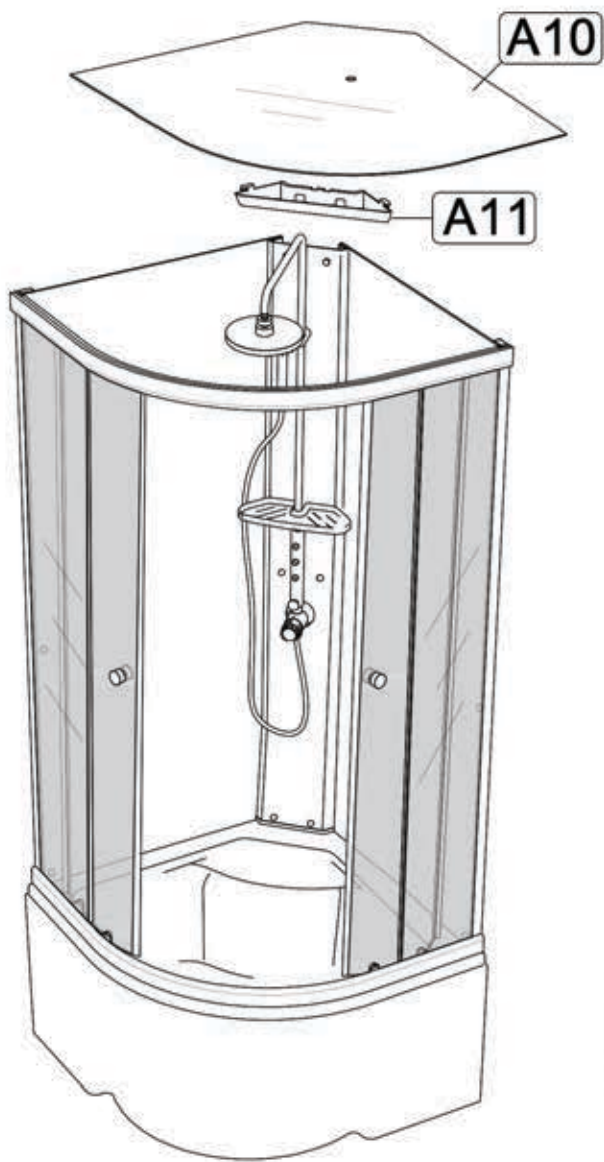

www.3tn.ru